

### Step 1

On your trailer plug remove the cover to gain access to the trailer cable.

### Step 2

Locate the supplied 2 pin connector and insert through the trailer plug rubber boot.

### Step 3

Expose the copper wire on each cable & loosen the screws holding the trailer plugs blue & red cable in place.


### Step 4

Insert the new cables together with the existing ones & tighten screws. The cables are colour coded so ensure the blue is inserted with the existing blue cable in the trailer plug along with the red with red cable.




ENSURE THE BLUE CABLE IS INSERTED WITH THE EXISTING BLUE CABLE ALONG WITH RED WITH RED.  
INCORRECTLY INSERTING THE THE WRONG COLOUR CABLE WILL RESULT IN THE BRAKE UNIT NOT WORKING.


### Step 1

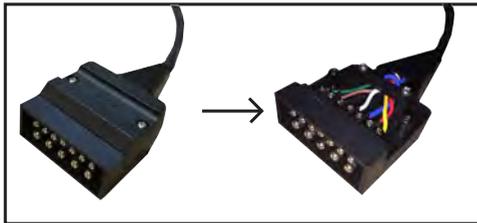


### Step 2

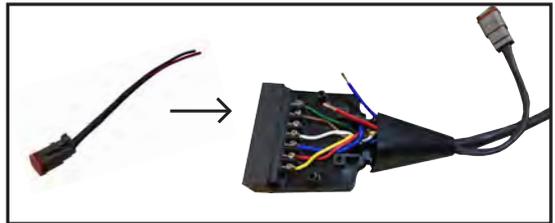

### Step 3

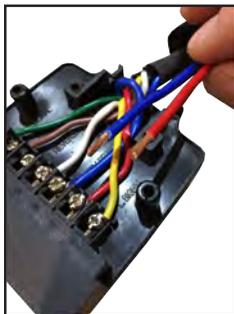

### Step 4

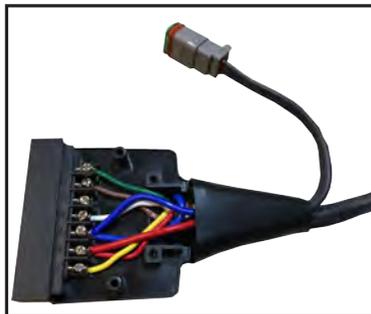

### Step 5

